

ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA

#84 Poly Lumbar Rocker



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket
- Rubber Mallet

Included Hardware

A  16 2 1/2" Screws

B  4 3 1/2" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, take one of the arm and back combo sides and lay it flat. Insert the top rail, the back, seat assembly, two 21 1/2" dowels (front leg) and one 18" dowels (back leg) into their proper locations. Tap into place with a rubber mallet for a tight fit. (Illustration 2)
3. Then take the other arm and leg combo and place it on top. Tap into place with the rubber mallet.
4. Fasten the back and top rail using 3 (A) 2 1/2" Screws. (Illustration 3)
5. Then fasten the dowels and seat assembly using 5 (A) 2 1/2" Screws. (Illustration 4)
6. Then flip the chair over and repeat steps 4 and 5 to fasten the other arm and leg combo.
7. With the chair laying on its side (or it may also be helpful to turn the chair upside down with the arm rests resting on a table), attach the two bottom runners to the bottom of the chair legs. Fasten each runner with 2 (B) 3 1/2" Screws. (Illustration 5)



Illustration 2

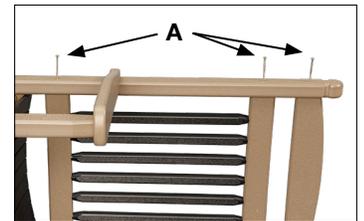


Illustration 3

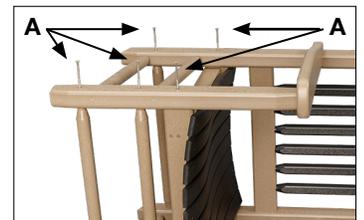


Illustration 4

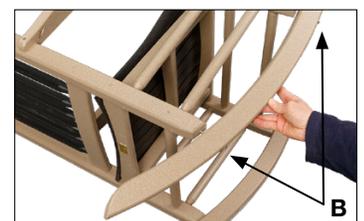


Illustration 5