

FANBACK SERIES
ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA

#312 Kid's Fanback Chair



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16" Wrench

Included Hardware

| | | | |
|----------|---|---|--------------------------------|
| A |  | 4 | 1/4" x 2 1/4" Carriage Bolt |
| B |  | 4 | 1/4" Nut |
| C |  | 4 | 1 1/2" Screws |
| D |  | 2 | 2 1/2" Flat-head Screws |

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. With the seat laying on a flat surface, line up the back and pull the back tight to the seat slat. Fasten on both sides using 2 (C) 1 1/2" screws. (Illustration 2)
3. To fasten the arm/leg combo, place 2 (A) 1/4" x 2 1/4" carriage bolts into the predrilled holes on the leg. (Illustration 3).
4. Use a hammer to pound the carriage bolts into the seat. (Illustration 4).
5. Using a 7/16" Socket fasten 2 (B) 1/4" nuts to the carriage bolts on the inside of the seat. Tighten. (Illustration 5)
6. Then fasten the arm to the back of the seat, using 1 (C) 2 1/2" screw. (Illustration 6)

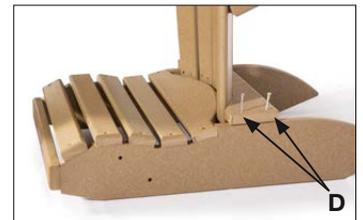


Illustration 2

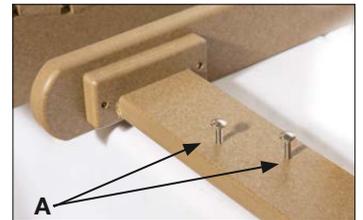


Illustration 3



Illustration 4



Illustration 5



Illustration 6