

BALCONY & PUB  
**ASSEMBLY INSTRUCTIONS**



(717) 354-8998 • (877) 560-5966  
 New Holland, PA

# #321C, B Balcony Chair Poly



## Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket

## Included Hardware

<b>A</b>		8	1/4" x 3" Carriage Bolt
<b>B</b>		8	1/4" Nut
<b>C</b>		2	1/4" x 3 1/2" Lag Bolt
<b>D</b>		12	2" Screws

## Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, line up the back and pull the back tight to the seat slat. With a #2 Square Head Bit, insert 2 (D) 2" screws into the pre-drilled holes in the bottom back board. (Illustration 2)
3. Attach arms to the back of the chair using 1 (C) 1/4" x 3 1/2" Lag Bolt per arm. (Illustration 3)
4. Set the legs upright and swing the seat into the upright position. Line up the pre-drilled holes. (Illustration 4)
5. Fasten the legs to the seat using 4 (A) 1/4" x 3" Carriage Bolts & 4 (B) 1/4" Nuts. (Illustration 4) Use a 7/16" Socket to fasten bolts.
6. Fasten the foot rest. The foot rest should have a 1 1/2" overhang. Fasten with 4 (D) 2" Screws with a #2 Square Head Bit. (Illustration 5)
7. Keeping the board flush to the back, fasten the back brace with 4 (D) 2" Screws with a #2 Square Head Bit. (Illustration 6)



Illustration 2



Illustration 3



Illustration 4

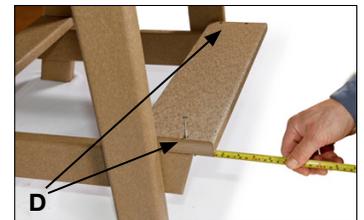


Illustration 5

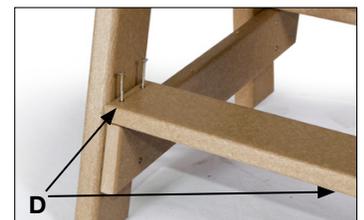


Illustration 6