

BALCONY & PUB
ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
 New Holland, PA

#321D Bistro Chair Poly



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

Included Hardware

A		8	1/4" x 3" Carriage Bolt
B		8	1/4" Nut
C		2	1/4" x 3 1/2" Lag Bolt
D		4	2" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, line up the back and pull the back tight to the seat slat. Keep flush. (Illustration 2)
3. With a #2 Square Head Bit, insert 2 (D) 2" screws into the pre-drilled holes in the bottom back board. (Illustration 2) Repeat on the other side.
4. Fasten the arm & leg combo to the back brace with 1 (C) 1/4" x 3 1/2" Lag Bolt. Repeat on the other side as well. (Illustration 3)
5. Set the legs upright and swing the seat upright. Align the pre-drilled holes. (Illustration 4)
6. Fasten the legs to the seat base using 4 (A) 1/4" x 3" Carriage Bolts & 4 (B) 1/4" Nuts. (Illustration 4)
7. Repeat on the other side.

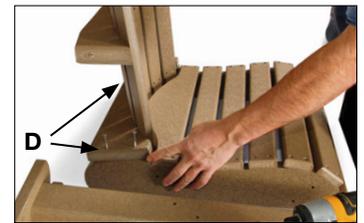


Illustration 2



Illustration 3



Illustration 4