

# BALCONY & PUB ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966  
New Holland, PA

## #322C, B Balcony Settee

#322C Counter Height | #322B Bar Height



### Instructions:

1. Use instructions from #321C, B Balcony Chair to assemble chairs.
2. With the two chairs setting upright, line up the table with the arms. Keep point flush with the round part of the arm rest. Fasten using 2 (A) 1½" Screws. (Illustration 1)
3. Fasten the back of the table to the arms using 2 (A) 1½" Screws. (Illustration 2)
4. Then fasten the bottom shelf using 8 (A) 1½" Screws. (Illustration 3)



Illustration 1



Illustration 2

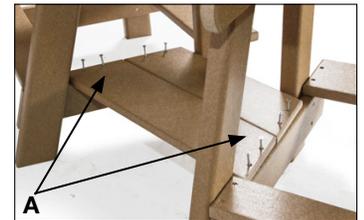


Illustration 3

### Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket

### Included Hardware

**A**  12 1½" Screws