

BALCONY & PUB
ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
 New Holland, PA

#328C, B Balcony Swivel Chair

#328C Counter Height | #328B Bar Height



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

Included Hardware

A		4	1/4" x 3" Carriage Bolt
B		4	1/4" Nut
C		4	1/4" x 1 1/2" Lag Bolt
D		2	1/4" x 3 1/2" Lag Bolt

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, fasten the arms to the back and seat base using 2 (A) 1/4" x 3" Carriage Bolts, 2 (B) 1/4" Nuts, & 1 (D) 1/4" x 3 1/2" Lag Bolt. (Illustration 2) Repeat on the other side.
3. After the arms have been fastened, removed the second seat slat (closest to the back) using a #2 Square head bit. (Illustration 3)
4. Turn the swivel plate till all the pre-drilled holes on the base are aligned. Using (C) 1/4" x 1 1/2" Lag Bolts insert the bolt into the 4 pre-drilled holes. Do not tighten until all 4 lags have started, then tighten. (Illustration 4)
5. Re-fasten the second seat slat that you removed in step three. (Illustration 5)

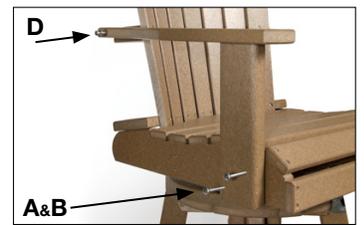


Illustration 2



Illustration 3



Illustration 4



Illustration 5