

FANBACK SERIES
ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA





#341 Fan Back Swing Poly



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

Included Hardware

| | | |
|---|---|------------------------|
| A |  | |
| | 2 | 1/4" x 3 1/2" Lag Bolt |
| B |  | |
| | 6 | 2" Screws |
| C |  | |
| | 2 | 5" Eye Bolt |
| D |  | |
| | 2 | 3/8" Nut |

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, set the seat upright. Set the back into the seat. Hold flush to seat. Fasten using 6 (B) 2" Screws. (Illustration 2)
3. Then fasten the arm/leg combo to the seat and back. Fasten the arm using 1 (A) 1/4" x 3 1/2" Lag Bolt. Then fasten the leg using 1 (C) 5" Eye Bolt & 1 (D) 3/8" Nut. (Illustration 3) Repeat on the other side.

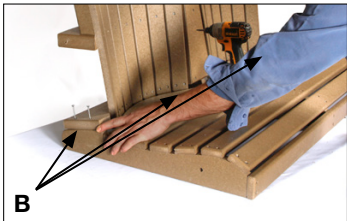


Illustration 2



Illustration 3