

FANBACK SERIES
ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA




#360 Fanback Chair



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16" Wrench

Included Hardware

A		4	1/4" x 3" Carriage Bolt
B		4	1/4" Nut
C		2	1/4" x 3 1/2" Lag Bolt
D		4	2" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, line up the back and pull the back tight to the seat slat. (Illustration 2)
3. With a #2 Square Head Bit, insert 2 (E) 2" screws into the pre-drilled holes and pull tight to the back seat slat. (Illustration 2) Repeat on the other side.
4. Fasten the arm & leg combo to the seat and seat back using 2 (A) 1/4" x 3" Carriage Bolts, 2 (B) 1/4" Nuts & 1 (D) 1/4" x 3 1/2" Lag Bolt. Do not tighten the nuts till complete. (Illustration 3)
5. Repeat step 4 for the other side.



Illustration 2

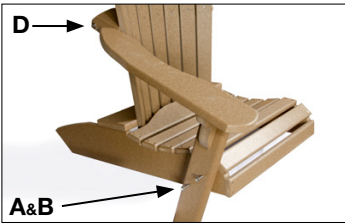


Illustration 3