



(717) 354-8998 • (877) 560-5966

#380 Deluxe Fanback Chair



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16" Wrench

Included Hardware

A		4	1/4" x 3" Carriage Bolt
B		6	1/4" Nut
C		2	1/4" x 2 1/2" Carriage Bolt
D		8	2" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, line up the back and pull the back tight to the seat slat. (Illustration 2)
3. With a #2 Square Head Bit, insert 2 (D) 2" screws into the pre-drilled holes and pull tight to the back seat slat. (Illustration 2) Repeat on the other side.
4. Fasten the arm & leg combo to the seat and seat back using 2 (A) 1/4" x 3" Carriage Bolts, 2 (B) 1/4" Nuts & 1 (D) 1/4" x 2 1/2" Lag Bolt. Do not tighten the nuts till complete. (Illustrations 3&4)
5. Before attaching the other arm/ leg assembly, attach front and back stretchers using 1 (D) 2" Screw, insert into pre drilled hole in leg (Illustration 5)
6. Repeat step 4 above for the second side arm/leg assembly, taking care to align front and back stretchers with the mortises on the second leg. (Illustrations 3&4)
7. Repeat step 5 above. (Illustration 5)



Illustration 2



Illustration 3



Illustration 4

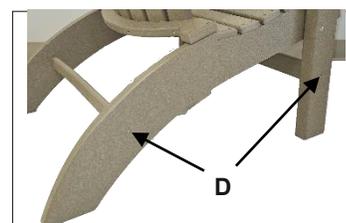


Illustration 5