

96" Table (*Bar and Counter Height*)

#896B and 896C English Garden Tables



(717) 354-8998 • (877) 560-5966
New Holland, PA




ASSEMBLY INSTRUCTIONS



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16" wrench

Included Hardware

A		16 2" Screws
B		12 2½" Screws
C		36 1½" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. Place the table top upside down and prepare to fasten the leg assemblies to the table top. Center the leg assembly on either side of the aluminum rails on the bottom of the table top. Fasten the legs of the leg assemblies using the pre-drilled holes using 2 (B) 2½" Screws. Repeat on the remaining 3 legs. (Illustration 2)
3. After you have fastened the leg assemblies to the table top, prepare to fasten the leg braces. Using 4 (A) 2" Screws on each side, fasten the braces to the leg assemblies. Repeat on the other side of the brace fastening to the center leg assembly. (Illustration 3)
4. Repeat with the second brace.
5. For larger tables with a center leg, screw the umbrella holder in the center of the brace assembly using 4 (A) 2" Screws. (Illustration 4)
6. Now attach table skirt brace on both sides of table using 5 (C) 1½" screws in pre-drilled holes. (Illustration 5)
7. Finally, attach footrest runner leg brace (Illustration 6) on both sides of table attaching with 4 (C) 1½" screws. Notice pre-drilled holes.

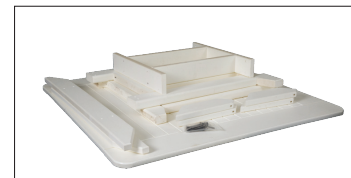


Illustration 2

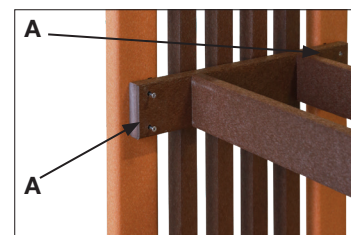


Illustration 3

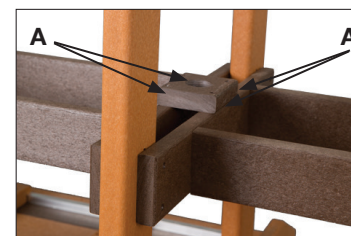


Illustration 4



Illustration 5



Illustration 6